


P810 Front Cabinet Exploded View

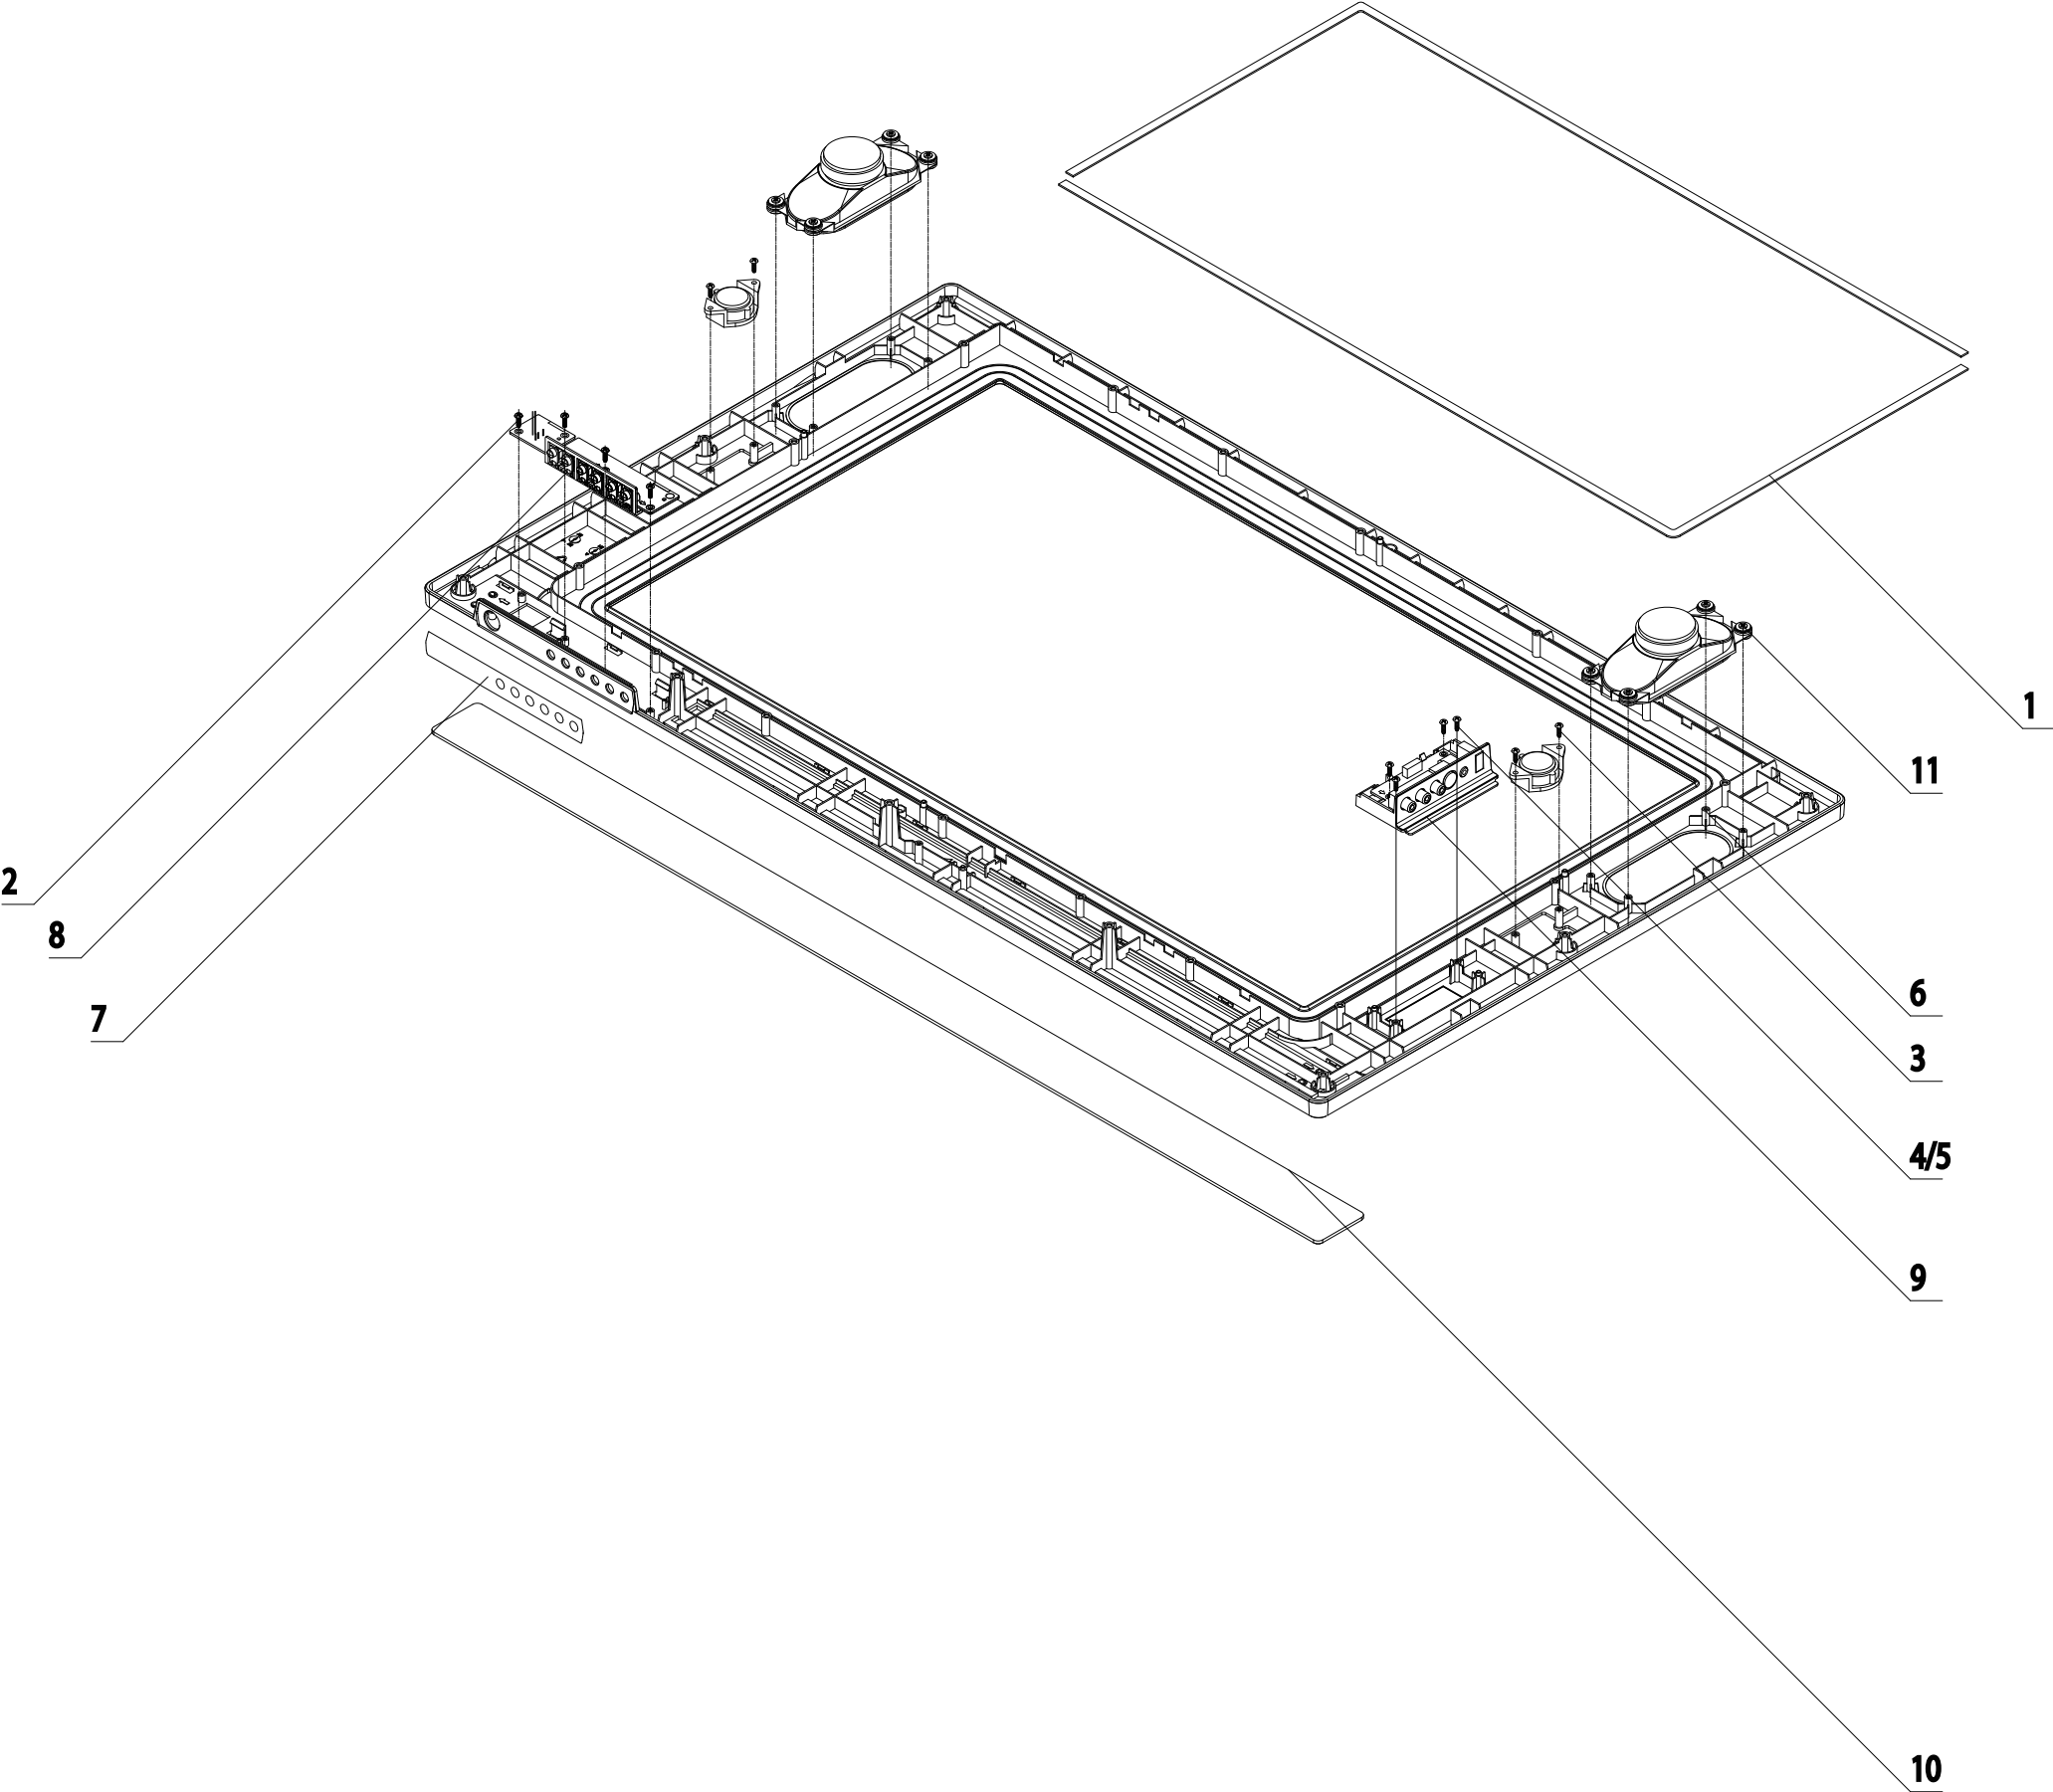

1	SPONGE
2	SCREW S/T B 3 X 8 AB
3	SCREW S/T B 3 X 10 AB
4	SCREW S/T B 3 X 10 AB
5	SCREW S/T B 3 X 10 AB
6	FRONT CABINET
7	INLAY KEY
8	PUSH BUTTON
9	REAR AV COVER
10	LUCENCY BAR
11	SCREW S/T B 3 X 10 AB